

Thank you for purchasing our device. Before installing, using or repairing the device, please read this manual carefully and pay attention to the safety warnings and instructions. This will ensure not only the protection of persons, but also the long-term service life of the device.

TECHNICAL PARAMETERS

Product code	ETW01-130	ETW01-200
Power	130W	200W
Power supply	220–240 V~, 50–60 Hz	
IP rating	IPX4	
Load capacity when mounted on a wall	10 kg	
Timer	1–9 hours (with setting memory)	
Temperature range	30–70 °C	

WARNING


- When using this product, keep it out of reach of children and persons with disabilities.
- Always unplug the power cord from the socket when not in use.
- If the power cord is damaged, it must be replaced by the manufacturer, service technician or other qualified person to avoid danger.
- For domestic use only. Do not use outdoors.
- Never place the product in water, bathtubs or other containers with water.
- Do not run the power cord under floor mats, runners or carpets to avoid the risk of tripping.
- Do not unplug the appliance by pulling on the cable; always grasp the plug, not the cable.
- Do not use in areas where petrol, paint or other flammable liquids are used or stored.
- Use this product only as described in this manual to avoid the risk of fire, electric shock or personal injury.
- This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they are supervised or have been instructed on how to use the appliance safely and understand the risks involved.
- Children must not play with the appliance.
- Cleaning and user maintenance must not be carried out by children without supervision.
- Not suitable for drying silk, down jackets and duvets.
- The maximum load capacity for wall mounting is 10 kg.
- To avoid danger to very young children, the appliance must be installed so that the lowest heated bar is at least 600 mm above the floor.
- This appliance is intended exclusively for drying fabrics washed in water.

USE OF THE APPLIANCE


1. Before installation, read the installation instructions carefully to understand the correct way to install and use the product.
2. Ensure that the installation is complete.
3. Plug the power cord into an electrical outlet.
4. After connecting to the appropriate power source, the power button will light up and the appliance will enter standby mode; pressing the button will light up the function button, which will allow you to adjust the settings.

WALL INSTALLATION


1. Attach the wall mounting brackets to the towel warmer using countersunk screws. Select a suitable position for fixing the four corners of the towel warmer. Mark a circle on each corner and then determine the centre of each marked circle for drilling the holes.

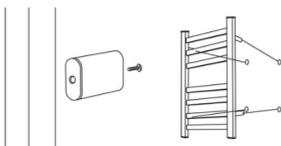


2. Insert the wall plugs into the four drilled holes as shown in the picture. Attach the second part of the wall mounting brackets to the wall.

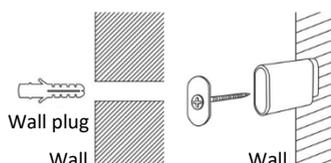

3. Attach the pull-out wall mounting brackets to the fasteners on the wall and adjust them to the appropriate position. Secure them firmly with countersunk screws.

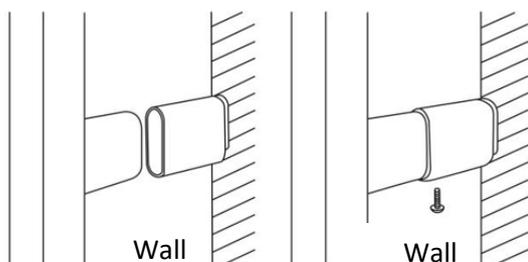

DESCRIPTION OF CONTROLS

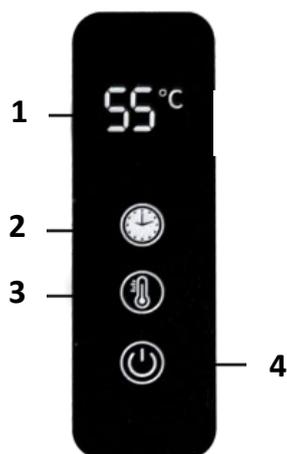

1. Digital display
2. Time setting
3. Temperature setting
4. ON/OFF

- Press button "4" to select on or off.
- Press the "2" button to select 1–9 hours for the timer setting; when 0 is selected, the device is permanently in heating mode. The time setting has a memory function.
- Press the quick button "3" to set the temperature in the range of 30–70 °C. The temperature setting has a memory function.

If the surface is exposed or uncovered, the product temperature will be lower than the set temperature for safety and energy-saving reasons.

To ensure correct and safe temperature control, first cover the sensor location.

MAINTENANCE

1. Before cleaning, disconnect the device from the mains and allow it to cool down.
2. Do not expose the device, power cord or plug to water. Keep the cord dry.
3. Never clean the device with alcohol-based cleaning agents or solvents.
4. First clean the surface with a damp cloth and then dry it with a soft cotton cloth. CAUTION: Do not use rough cloths to wipe the product, as they may scratch the surface.

The product is covered by a CE declaration of conformity in accordance with applicable regulations.
Available on request from the manufacturer: info@solight.cz, or downloadable from www.solight.cz.



SOLIGHT

Solight Holding, s.r.o., Na Brně 1972, Hradec Králové 500 06, Czech Republic.