


Thank you for purchasing our device. Before installing, using or repairing the device, please read this manual carefully and pay attention to the safety warnings and instructions. This will ensure not only the protection of persons, but also the long-term service life of the device.

## TECHNICAL PARAMETERS

Product code	ECD01
Power	230 W
Power supply	220–240 V~, 50–60 Hz
IP rating	IPX1
Load capacity of middle section	10 kg
Load capacity of side section	2.5 kg each side
Timer	1–9 hours with setting memory
Temperature range	30–70 °C

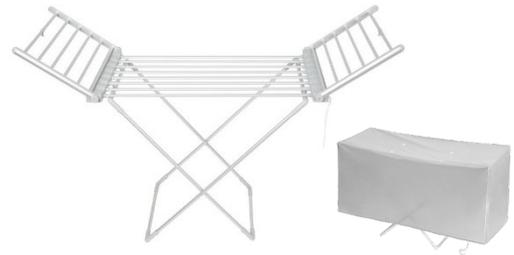


## PACKAGE CONTENTS

- Electric clothes dryer ×1
- Instruction manual ×1
- Cover ×1


## WARNING

- Keep out of reach of children and persons with disabilities when using this product.
- Always unplug the power cord from the socket when not in use.
- If the device or power cord is damaged, do not continue to use or repair the device.
- For domestic use only. Do not use outdoors.
- Never immerse the product in water.
- Do not run the power cord under floor mats, rugs or carpets to avoid tripping hazards.
- Do not pull the plug out of the socket by the cable; always hold the plug, not the cable.
- Do not use in areas where petrol, paint or other flammable liquids are used or stored.
- Use this product only as described in this manual to avoid fire, electric shock or injury.
- This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children must not play with the appliance.
- Cleaning and user maintenance must not be carried out by children without supervision.
- Always wring out the laundry thoroughly before use so that no water drips from it.
- Always fold out all side arms before turning on the dryer.
- Do not completely cover the dryer with clothes or bedding.
- Not suitable for drying silk, down jackets and duvets.
- This appliance is only intended for drying fabrics washed in water.
- Repairs to the appliance may only be carried out by the manufacturer's service centre.


## ASSEMBLY OF THE APPLIANCE

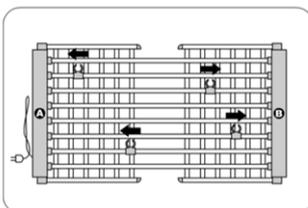


1. Place the clothes dryer on a flat surface with the hooks facing upwards. Move the outer latches to end A (near the switch) and the inner latches to end B.

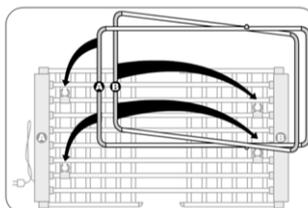

2. Insert the short rod "B" into the hooks in zone "B" and the long rod "A" into the hooks in zone "A".

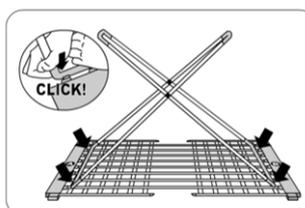


3. Press firmly on each rod until it clicks into the corresponding latch.

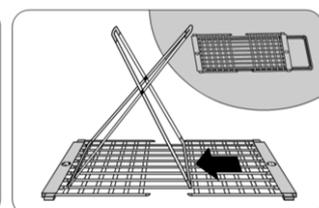

4. To fold the dryer, gently press the short rod on side "B" (on the opposite side from the plug) until the dryer is properly folded.


## USING THE DEVICE

1. Set the switch to the [OFF] position (i.e. the power indicator light is not lit).
2. Plug the power cord into an electrical outlet.
3. After connecting to a suitable power supply, press the ON/OFF switch. The power indicator light will illuminate and the heater will start working.

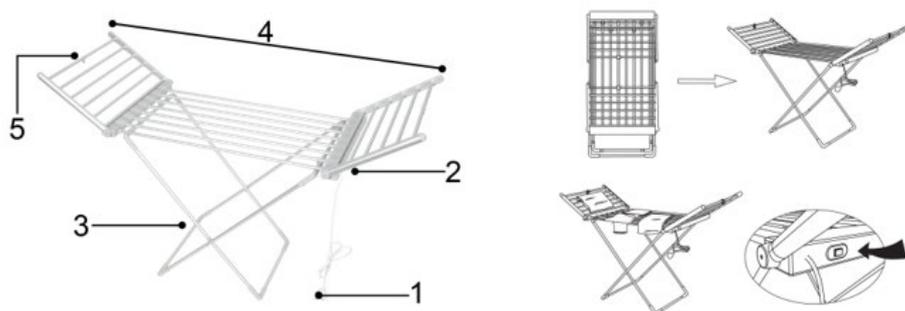

	Description	Function
1	Power cord	For connection to the domestic mains supply
2	Switch button	Turns the tumble dryer on and off
3	Support legs	Stand base for the tumble dryer
4	Heating area	Space for drying laundry
5	Clip	For securing the wings of the dryer in the folded and stored position

## DESCRIPTION OF CONTROLS

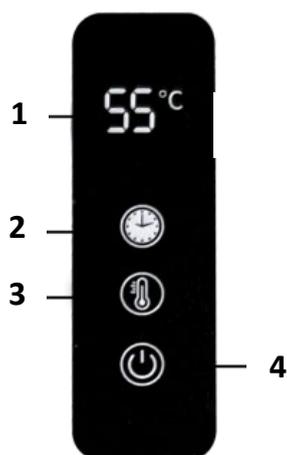

1. Digital display
2. Time setting
3. Temperature setting
4. ON/OFF

- Press the "4" button to select on or off.
- Press the "2" button to select 1–9 hours for the timer setting; when 0 is selected, the device is permanently in heating mode. The time setting has a memory function.
- Press the quick button "3" to set the temperature in the range of 30–70 °C. The temperature setting has a memory function.

## MAINTENANCE

1. Before cleaning the device, ensure that it has cooled down and that the power cord is disconnected from the mains.
2. Do not immerse the power cord or any of its components in water.
3. First clean the device with a damp cloth, then with a dry cloth.

The product is covered by a CE declaration of conformity in accordance with applicable regulations.  
Available on request from the manufacturer: [info@solight.cz](mailto:info@solight.cz), or downloadable from [www.solight.cz](http://www.solight.cz).



**SOLIGHT**

Solight Holding, s.r.o., Na Brně 1972, Hradec Králové 500 06, Czech Republic.