

The RNUB125 Cordless Angle Grinder uses a new generation, high quality, **carbon-free motor** to power it, which has a significantly longer life than the carbon motors used previously. Please read the following instructions carefully and follow them to ensure that the product serves you safely and to your full satisfaction. Avoid unprofessional handling of this tool, and always observe the electrical appliance use policy. Keep the instruction manual carefully. Never expose to environments with high humidity, avoid contact of the product with liquids.

TECHNICAL PARAMETERS

Model	RNUB125
Operating voltage	21 V
Engine	Carbonless engine
Speed without load	7000 RPM
Rated power	1100W
Grinding wheel specifications	Outer diameter max. 125 mm, inner diameter 22 mm
Battery type	Li-Ion battery
Battery capacity	4.0 Ah

Part of the package

1pc handheld cordless angle grinder
1pc 21V 4Ah Li-Ion battery
1pc charger
1pc instructions
1pc key
1pc collar
1pc handle



SAFETY MEASURES

Read and follow the following instructions.

Failure to follow all instructions below may result in electric shock, fire, or serious personal injury.

SAFETY RULES FOR ANGLE GRINDER

- Always wear safety glasses and earplugs. Other protective equipment such as dust respirators, gloves, hard hats and aprons should also be used.
- The protective collar and handle must be firmly attached.
- Do not use a disc that is damaged or has cracks.

CLEANING AND MAINTENANCE

- Remove the battery before performing any service or maintenance.
- After about 10 hours of use, the collar should be removed and the grinder cleaned of dirt.
- Store in a dry and clean environment at room temperature.
- More complex repairs may only be carried out by experts at the Solight holding s.r.o. service centre.

USING

Wear appropriate clothing, work gloves and eye protection when using this equipment. Before each use, make sure the equipment is working properly by running it briefly "on empty".

- When the grinder is put into operation, make sure to keep your hands at least 15 cm away from the grinding area.
- If the grinder shakes or vibrates during use, it is the result of a defective wheel or a faulty mounting.
- Do not use the sander in rain or in explosive or flammable environments.
- Remove the battery when not in use.
- If the performance of the grinder decreases, check the battery charge or recharge it.



COMMISSIONING

Fully charge the battery before first use. Then connect it to the sander.

FIRST INSTALLATION

1. Attach the protective collar so that you are not endangered by flying sparks when working.
2. Attach the handle to the sander according to the way you will hold the sander.
3. Attach the grinding wheel.
4. Insert the battery.


ASSEMBLY OF THE CORNER

Remove the battery before any service work.

1. Squeeze the shaft movement lock, loosen the lock nut with a wrench and remove it.
2. Put on the disc.
3. Fit the lock nut and tighten it.

CHARGE

1. Insert the battery into the charger or connect the charger connector to the battery.
2. Plug the charger into the power supply using the power cord provided.
3. Charging is indicated by a red LED.
4. Green LED indicates full charge.
5. Average charging time is about 2-4 hours, depending on battery capacity.

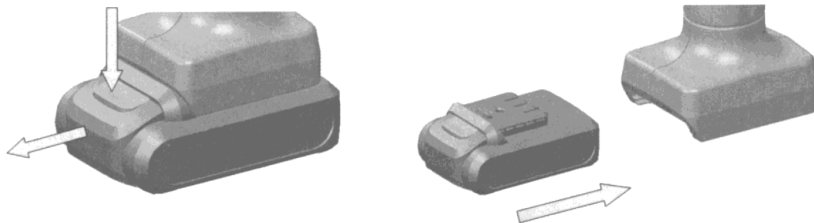

The product has been issued with a CE declaration of conformity in accordance with the applicable regulations.

On request from the manufacturer: info@solight.cz, or downloadable from www.solight.cz.



SOLIGHT

Solight Holding, s.r.o., Na Brně 1972, Hradec Králové 500 06, Czech Republic.