


Thank you for purchasing our equipment. Please read this manual carefully and heed the safety warnings and instructions before installing, using or repairing the equipment. This will ensure not only the protection of persons, but also the long life of the equipment.

TECHNICAL PARAMETERS

Power	220-240 V/50Hz
Power input	40W
Dimensions	26 cm (width) x 30 cm (height) x 25.5 cm (depth)

INSTALLATION

1. Snap the feet onto the lower heat frames
2. Place the device on a flat and stable surface.
3. Turn the upper frames counterclockwise, the heater will work when plugged into the socket. A green light will illuminate on the top of the unit.

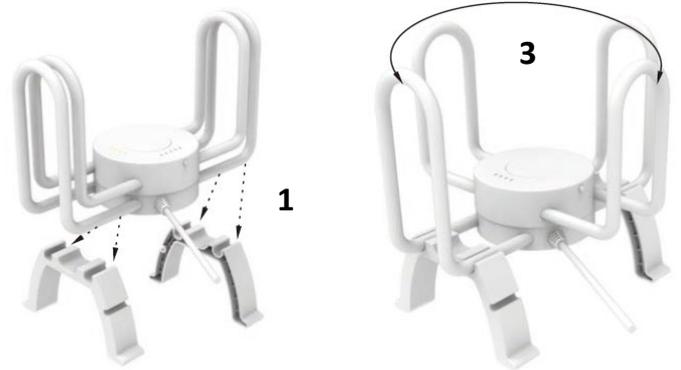

To turn the device off, turn the heat frames clockwise and unplug the power cord from the power outlet.

MAINTENANCE

Before cleaning, switch off the device, unplug it from the power outlet and let it cool down.

- Clean the surface of the device with a small damp cloth.
- Do not use harsh, strong cleaning agents or abrasives. Never clean with alcohol or solvent-based cleaners.
- Alcohol or solvents on plastic parts can weaken and cause cracking of these parts over time.

NOTICE

- Use the machine only for drying gloves and shoes.
- The device may only be used by children under the supervision of a responsible person and only if they understand the consequences of improper use.
- When transporting/carrying, take care not to damage the device. Do not continue to use the device if it or any part of it is damaged or missing.
- Do not repair, modify or disassemble the equipment.
- Clean the device with a dry or damp cloth. Always allow the equipment to dry sufficiently and prevent water from entering the equipment. Only clean the device when it is disconnected from the power supply.
- Do not place the equipment in bathrooms, washrooms, showers or similar rooms where the equipment could get wet. Consult a qualified electrician for more detailed information on the requirements for installing and using electrical equipment in washrooms.
- If the bathroom in the living space is sufficiently spacious and meets the zoning requirements, the location and use of electrical equipment is only possible with regard to the safety requirements set for these spaces.
- Only place the device where there is easy access to a power outlet so that you can switch off the device in an emergency.
- Do not place the device on: unstable floors or pads, unstable tables or pieces of furniture, uneven and dirty surfaces.
- Place the device only on flat, firm and stable surfaces - on floors and floor coverings with a stable and firm structure (e.g. ceramic tiles, wooden floors, etc.). Do not place it on floor coverings with an unstable structure, such as carpets or other decorative floor coverings with long fibres.
- The device must not be placed directly under an electrical outlet.
- If the device is damaged, it must not be used.
- Do not touch heated surfaces of the device, some components remain warm for a while even after the device is switched off.
- Always keep an eye on the device when it is switched on.
- This appliance is not intended to be controlled by an external programmer, automatic timer or remote control as there is a risk of fire if the appliance is covered or incorrectly positioned.

The product has been issued with a CE declaration of conformity in accordance with the applicable regulations.
On request from the manufacturer: info@solight.cz, or downloadable from www.solight.cz/en.

