

## Operating manual

Dear Valued Customer, thank you for purchasing our product. If you wish it to serve you safely and fully, please read these instructions carefully and follow them. This will help you avoid improper use or damage to the product. Prevent unauthorized use of this device and always follow all rules concerning the handling of electrical appliances. Keep the operating manual for future reference. The main unit should be located as close as possible to the window.

## TECHNICAL SPECIFICATIONS

Measuring room temperature	-10°C to +50°C
Measuring room humidity	20% to 95%
Measuring outdoor temperature	-25°C to +50°C
Measuring outdoor humidity	20% to 95%
Power supply	2x AAA 1.5V alkaline battery
	AC/DC power adapter 5V/1,200mA
Accuracy of temperature measurement	0.1°C
Accuracy of humidity measurement	1%


To ensure correct LCD light intensity, we recommend the use of alkaline batteries with a nominal voltage of 1.5V. Rechargeable NiMH batteries typically supply 1.2V, and the LCD light intensity is therefore worse.

## Main unit


If you run the device **on batteries**, open the battery cover and insert two AA alkaline batteries (**not included in scope of delivery**). Mind the indicated polarity. When you turn the device on, all LCD segments will be lit for a moment and the device will beep shortly. Then it will switch to standard temperature and humidity measuring mode. If you run the device **using AC/DC adapter**, plug the power supply connector into the inlet socket on the weather station and then connect to power socket. To reset the device, remove the batteries or disconnect the device from power adapter for at least five seconds. This will cause all settings and memory content to be lost. If you run the device on batteries, the display is lit for 8 seconds after each activation. If you run the device using power adapter, the display may be lit uninterruptedly (depending on settings). You can pair the main unit with up to three sensors. Every sensor is powered by two AA batteries (not included in the scope of delivery).

**Default settings:** 24-hour format, time indication shows 00:00, alarm clock 06:00 and temperature is set to °C.

## 1. BUTTON FUNCTIONS

control \ function		mode	rainbow	+	wave -	CH	loop	MEM	on/off AL	 / Z <sup>2</sup>
Standard mode	Short push	Time / alarm display	Display backlight colour setting	-----	Display backlight intensity/terminate RCC signal search	Toggle between individual sensors / cycle through various sensor displays	Turn sequential colour switching on/off	Display max. and min. temperature and humidity memory	Switch alarm clock on/off	Display backlight/ alarm snooze
	HOLD	Enter time, alarm setting mode °C/°F, 24/12	-----	-----	Call up RCC signal reception	Activate signal reception from sensors	-----	Delete max. and min. temperature and humidity data	-----	-----
Time setting	Short push	Confirm settings	-----	One step forward	One step backward	-----	-----	-----	-----	-----
	HOLD	-----	-----	Fast forward	Fast backward	-----	-----	-----	-----	-----
Alarm clock setting	Short push	Confirm settings	-----	One step forward	One step backward	-----	-----	-----	-----	-----
	HOLD	-----	-----	Fast forward	Fast backward	-----	-----	-----	-----	-----

## 2. MAIN FUNCTIONS

- 6 levels for weather forecast: sunny, scattered clouds, overcast sky, rain, heavy rain, snow
- RCC signal reception mode
- 12/24 hrs time format
- Temperature in °C or °F
- 3-digit display for room temperature Measuring accuracy: +/- 0,1°C, measuring range -10°C + 50°C
- 2-digit display showing room and outdoor humidity. Measuring accuracy: +/- 1%, measuring range 20% - 95%
- 3-digit display showing outdoor temperature. Measuring accuracy: +/- 0,1°C, measuring range -25°C +50°C
- The device will stop measuring the temperature when the alarm is triggered or in RCC signal reception mode (clock radio signal).
- The weather station may receive temperature data from up to three channels (transmitters)
- Maximum inner and outer temperature and humidity memory
- Alarm clock
- USB output 5V, 1 A for power supply
- Alarm snooze function (1-60 minutes)
- Icing symbol indication 
- The device operates at a frequency of 433.92 MHz
- Low battery indication of the main unit and the outdoor sensor

## 3. DEVICE FUNCTIONS AND FEATURES


### 3.1 Time and alarm clock setting

Press “**mode**” button in standard mode for more than 2 seconds to enter the setup mode. The active segment will start to blink.  
Adjustment sequence: °C/°F → 12/24Hr → hours → minutes. To leave the adjusting mode, press “**mode**” button until the adjusting segments stop flashing.  
Press “+” or “-” button to move one step forward or backward; press these buttons longer to move forward or backward faster.


### 3.2 Alarm clock setting

Press “**mode**” button shortly to display the set alarm time. To set the alarm, hold the “**mode**” button longer to enter the alarm setting mode: clock → minutes → alarm snooze. To leave the adjusting mode, press “**mode**” button until the adjusting segments stop flashing. If no button is pressed for 30 seconds, the device will exit the adjusting mode and save the currently set values. To turn the alarm on or off use “**on/off AL**” switch on the side of the device.

### 3.3 Alarm sequence

Turning the alarm on or off is done using the “**on/off AL**” switch. The “Z” symbol will start flashing on the display when the alarm is triggered. If you press  / Z when the alarm is triggered, its function will be put off by the pre-set time interval (1 to 60 min). To switch the alarm signal off press any other key. You can use the snooze function as many times as you wish. When the alarm rings, no RCC signal is received; its reception will be resumed once the alarm is turned off. The alarm signal will automatically turn off after two minutes. The alarm sequence is as follows: a) 0-10 seconds: one beep per second; b) 10-20 seconds: two beeps per second; c) after 20 seconds: three beeps per second.



### 3.4 Sensor switching function

In standard mode, you can toggle between the channels by pressing the “**CH**” button (CH1, CH2, CH3 or cycling between all three channels). When cycling, the  symbol will appear on the display. In three-channel cycling display mode, the values will change automatically. If less than three outdoor sensors are connected, no data is displayed when cycling through unconnected channels.

### 3.5 Sensor pairing function

First of all, a different channel must be set on the various sensors. Open the battery cover and set channel number 1, 2 or 3 using the position switch. Then insert batteries and close the cover. When switching the weather station on for the first time, the sensors will be paired automatically. However, if you want to change the pairing, switch the channel using the “**CH**” button and then hold it for at least three seconds. Pairing will take about three minutes. If the pairing fails, the weather station is probably out of the signal range.
















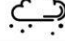
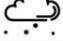
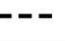
### 3.6 Receiving RCC control signal

- Receiving the RCC signal will start automatically after starting or resetting.
- Forced RCC signal reception: hold the “- **wave**” button.
- When the signal reception is turned on, a three-minute long synchronization will start. During synchronization, you cannot enter any functions; the weather station is not performing any measurements now, the USB power outlet is also deactivated.
- Automatic signal reception every day.
- Automatic reception will take place at the following daily times: 1:00, 2:00 and 3:00. In case of a failure, the signal reception attempt will be repeated at 4:00 and 5:00. If the signal is successfully received at 4:00, no further reception will take place for the given day. If the signal reception at 4:00 fails, it will be repeated at 5:00 and, regardless of whether successful or not, it will not be repeated for the given day. The control signal reception process lasts 7 minutes.
- The  icon will flash in the RCC signal reception mode.
- If the signal is weak or if the device is unable to recognize correct signal, the tower symbol will flash but no radio wave symbol will appear.
- If the control signal has been successfully received, the full RCC reception icon will illuminate and the device will exit the signal reception mode.
  - To exit the reception mode, briefly press the “- **wave**” button.
  - If alarm is activated in the RCC signal reception mode, the device will exit the reception mode and enter the alarm mode.
  - After receiving the DST signal, a DST icon will be displayed.
  - After resetting,  and DST symbols will disappear.

### 3.7 Weather forecast function


The weather station generates a weather forecast for the next 8 hours. The measurement is based on monitoring the pressure trend. The forecast information is for reference only. This weather station cannot be compared with professional computer equipment. For objective forecast, refer to official sources.

Six levels of graphic weather forecast:

Sunny			
Slightly cloudy			
Cloudy			
Rainy			
Heavy rainy			
Snowy			

**Note:** The weather forecast may be accurate under natural ventilation conditions; errors occur when the device is inside a room or in air-conditioned environment.

### 3.8 Display light

If the weather station is running on batteries, pressing the  / Z touch sensor will illuminate the display for 8 seconds. If the display backlight is weak, replace the batteries. When running on power adapter, the display may be lit constantly (depending on the backlight intensity setting).

### 3.9 Display backlight colour setting

Briefly press the “**rainbow**” button to set different background colours (white, red, orange, yellow, green, blue-green, blue and purple). When running on power adapter mode, press the “-” button to adjust the backlight intensity. If you press the “**loop**” button, the display backlight colours will change sequentially. If you press the “**loop**” button again, the display will remain lit with the current colour.

A CE Declaration of Conformity is issued to the product in accordance with applicable regulations. On request from the manufacturer: info@solight.cz, or to download at [https://www.solight.cz/documents/te86\\_prohlášení\\_o\\_shodě.pdf](https://www.solight.cz/documents/te86_prohlášení_o_shodě.pdf)

The maximum radiated power of the device in the working frequency band 433.92MHz is 10mW (+ 10dbm).

Producer: Solight Holding, s.r.o., Na Brně 1972, Hradec Kralove 500 06, Czech Republic.