


Thank you for purchasing our portable LED spotlight. Before installing, using or repairing the device, please read this manual carefully and pay attention to the safety warnings and instructions. This will ensure not only the protection of persons, but also the long-term service life of the device.

TECHNICAL PARAMETERS

Luminous flux	1000lm*
Power	10W
Colour temperature	4000K (neutral white)
Light source	LED COB
Battery	Li-Ion battery (4400mAh, 3.7V)
Battery life	min. 2 hours/max. 4 hours
Battery charging time	approx. 4 hours (5V, 2A)
LED lifespan	20,000 hours
IP rating	IP54 (splash-proof, suitable for outdoor use)

* Maximum luminous flux is achieved when fully charged

DESCRIPTION OF THE DEVICE

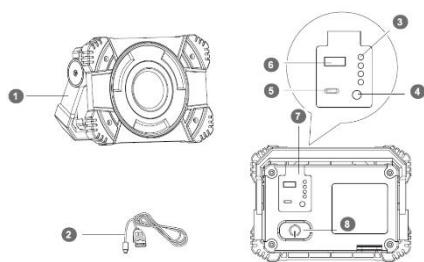

1. Handle
2. USB charging cable
3. Battery status indicator
4. Battery status button
5. USB-C connector
6. USB connector
7. Protective cover
8. On/Off button

POWER BANK FUNCTION

- Connect your device to the worklight using a USB charging cable by inserting the USB plug into the USB socket.

CHARGING

Before first use, you must fully charge the spotlight battery.

1. Ensure that the spotlight is switched off.
2. Unwind the USB charging cable (2) completely.
3. Connect the USB cable (2) to the USB-C socket (5) on the spotlight and connect the other end of the cable to the adapter/power bank (not included/5 V, max. 2 A).
4. The battery status indicator (3) flashes green when the battery is charging.
5. When the battery is fully charged, all four battery status indicator lights (3) will light up green. Disconnect the spotlight from the power supply.
6. The spotlight does not work while charging.

CONTROL

1. Press the battery status button (4) to check the charge level. When the battery is fully charged, all four battery status indicator lights (3) will be green. The lower the charge level, the fewer lights will be lit.
2. Carry the spotlight to the desired location using the handle (1).
3. Press the switch (8) to turn on the spotlight.
4. The LED shines at 100% brightness.
5. To reduce the brightness, press the switch (8).
6. The LED will shine at 50% brightness.
7. To adjust the spotlight, open the handle (1) so that the light falls on the desired area at the correct angle.
8. To switch off the spotlight, press the switch (8).

SAFETY WARNING

- Fully charge the batteries before using the device for the first time.
- The device is not intended for children.
- If the device is damaged, discontinue use.
- The manufacturer and distributor are not liable for any damage caused by improper use of the product.
- Do not repair or modify the device; all repairs must be carried out by the manufacturer's service centre.
- Do not open the cover or otherwise interfere with the product's construction.
- Keep the device away from open flames, hot surfaces and flammable materials.
- Place the device at least 0.1 m away from the illuminated object.
- Do not cover or obscure the product during charging, as this may cause overheating.
- Keep the battery out of the reach of children.
- The battery is not replaceable; in the event of a malfunction, the entire device must be disposed of at a designated location.

The light source of this luminaire is non-replaceable. At the end of its service life, the entire luminaire must be replaced and disposed of at a designated location. This product contains a light source that cannot be removed for verification for design reasons, and therefore the entire product is considered a light source.

The product has been issued with a CE declaration of conformity in accordance with the applicable regulations.

Available on request from the manufacturer: info@solight.cz, or downloadable from www.solight.cz/en.

