

Thank you for purchasing our product. Before installing, using or repairing the device, please read this manual carefully and pay attention to the safety warnings and instructions. This will ensure not only personal safety but also the long-term durability of the device.


The device is equipped with a USB socket (output: 5V, 1A). Switch the device on using the  button; press it again to adjust the brightness, and press it once more to switch the device off.

WARNING

- Installation should be carried out by a qualified person.
- All work must be carried out with the power disconnected.
- Before installation, ensure that the power is switched off.
- Do not cover the LED work light or hang any objects on it.
- The power cable is not replaceable: if the cable is damaged, the light must be taken out of service.
- The recommended operating time is 10 hours per day.
- Do not stare directly into the light source for long periods.

INSTALLATION FOR WM-60W-FVP

- Twist to fit all parts of the unit together.

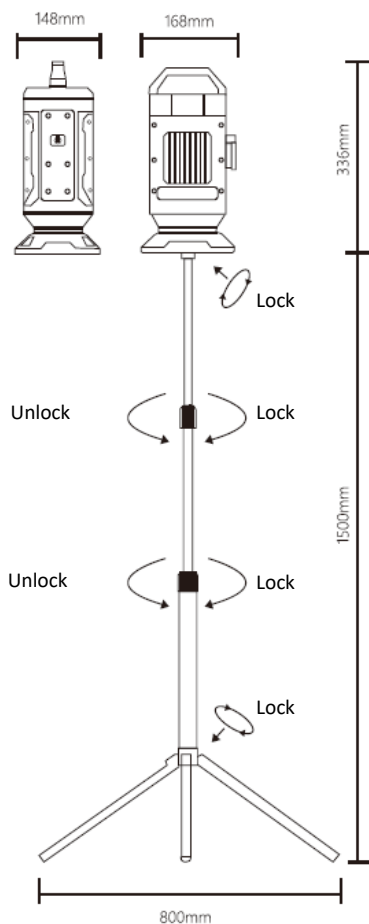

The light source in this luminaire is non-replaceable; at the end of its service life, the entire luminaire must be replaced and disposed of at a designated collection point. This product contains a light source which, for design reasons, cannot be removed for inspection; therefore, the entire product is considered to be the light source. The power cable cannot be replaced; if it is damaged, the device must no longer be used.

A CE Declaration of Conformity has been issued for the product in accordance with applicable regulations.

Available on request from the manufacturer: info@solight.cz, or downloadable from www.solight.cz/en.

