
EN Instructions for use of the wireless doorbell Solight 1L20, 1L20B, 1L23 Learning code version

Dear customer, thank you for purchasing our product. Please read the following instructions carefully and follow them to serve you safely and to your full satisfaction. This will prevent misuse or damage. Avoid unprofessional handling of this appliance and always observe the electrical appliance usage guidelines. Keep the instruction manual carefully.

Description of the doorbell

1. Selecting the receiver tune (36)
2. Volume selection (4 levels)
3. LED
4. Hole to open the battery cover
5. Name badge cover
6. Transmitter button

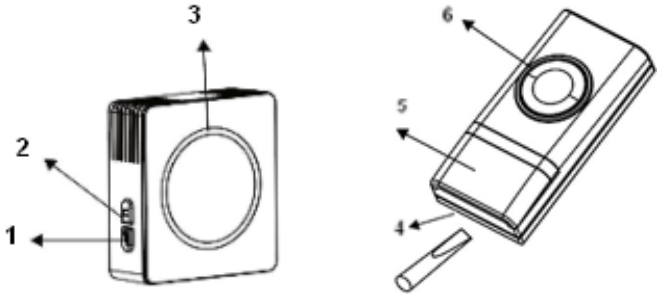

The doorbell operates at a frequency of 433,92MHz. The range is maximum 150m in an open area. The receiver is powered from a 230V socket. The battery for the transmitter is alkaline 12V (LR23A).

Installation

1. Tear off one side of the double-sided adhesive tape and stick it to the underside of the button (transmitter).
2. Tear off the other side of the double-sided adhesive tape.
3. Select a suitable place and stick the button. If a stronger fixing is needed, use dowels and screws - open the button (see battery replacement), drill holes in the marked circular slots on the inside of the button cover and screw it to the base. Then cover the other part of the button and press the two parts together.
4. Connect the doorbell (receiver) to an electrical socket
5. Select the melody, volume or type of signaling

Replacing the battery
Using a flathead screwdriver push into the groove of the joint on the short side of the button and open the cover . Insert the CR2032 battery, observing the marked polarity. Then close the cover.

Doorbell control

Select the melody using button 1. Press to change the individual melodies. The selection is automatically saved when playback is finished.
The volume is selected using button 2. Four volume levels 50dB - 90dB.

"Learning code" function
allows you to pair several bells or buttons into one group, or restore the connection between them. This allows several buttons to ring one bell or one button to ring several bells. A maximum of 6 buttons can be paired to one bell. One button can be paired with up to 15 bells.
Assign a new button to a bell or a new bell to a button:
1. Press and hold the volume button on the receiver for 5 seconds. The LED will flash rapidly and a melody will sound. Release the volume button and allow the LED to flash.
2. Press the transmitter button one or more times. The selected melody is played again, the transmitter is assigned. The transmitter must be at least 50 cm away from the receiver when pairing. All previously paired transmitters are also assigned to the receiver.
3. Repeat the same process when adding a new receiver to one transmitter. All previously paired receivers are also assigned to a transmitter.
Cancel pairing, resetting the connection
If you have multiple transmitters paired to your receiver, you may need to unpair one of the transmitters. It may also happen that the wireless connection stops working.
1. Press and hold the volume button for 10 seconds.
2. Even if the receiver sounds after 3 seconds, ignore it and hold the button until the receiver sounds again. Then release the button. All drivers are now cleared from memory.
3. Reassign the necessary transmitters according to the above procedure.

Solight Holding s.r.o., declares that the product complies with the requirements and provisions of Directive 2014/53/EU. The equipment can be freely operated in the EU. The Declaration of Conformity can be found at www.solight.cz. The product may be operated under general authorisation No.VO-R/10/05.2014-3

Producer: Solight Holding, s.r.o., Na Brně 1972, Hradec Králové 500 06, Czech Republic, www.solight.cz